


INSTALLATION


➤ Instructions

Thule Adapter Wall - Ford Transit Custom V710 Fixed T3200

302952 - 302953

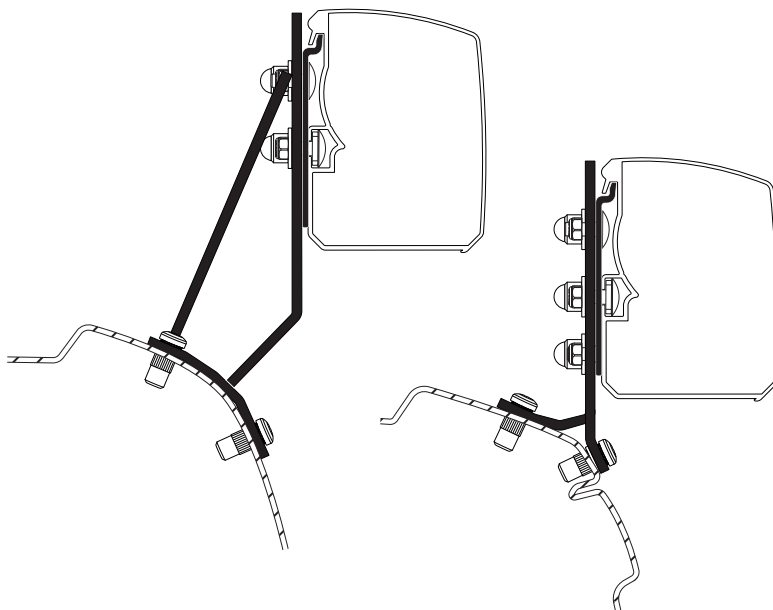

EN ADAPTER - INSTRUCTIONS

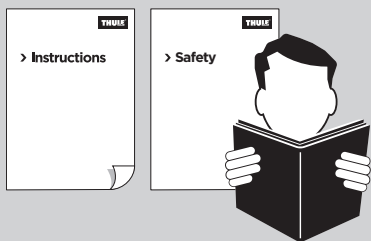

DE Adapter - Anleitung
NL Adapter - Instructies
FR Adaptateur - Instructions
IT Adattatore - Istruzioni
ES Adaptador - Instrucciones
SV Adapter - Instruktioner
FI Adapteri - Ohjeet
DA Adapter - Instruktøner
NO Adapter - Instruksjoner

PL Adapter - Instrukcje
PT Adaptador - Instruções
CS Adaptér - Návod
SL Adapter - Navodila
TR Adaptör - Talimatlar
ZH 适配器 - 说明
JA アダプター - 取扱説明書
KO 어댑터 - 지침

1 WARNINGS & INFO

Warnungen & Infos / Waarschuwingen & info / Avertissements & informations / Avvertenze & informazioni / Advertencias & información / Varningar & information / Varoituksia & tietoja / Advarsler & info / Advarsler & information / Ostrzeżenia & informacje / Avisos e informações / Varování a informace / Opozorila in informacije / Uyarılar ve Bilgiler / 警告和信息 / 警告と情報 / 경고 및 정보

2 FITGUIDE

Kaufhilfe / Koopgids / Guide de sélection / Guida alla scelta / Guía de ajuste / Storleksguide / Valintaopas / Tilpasningsguide / Tilpasningsveiledning / Przewodnik Fit Guide / Guia de compatibilidade / Průvodce velikostmi / Fitguide / Takma Kilavuzu / 选配指南 / フィッティングガイド / 장착 가이드

3 CONTENT

Inhalt / Inhoudsopgave / Sommaire / Contenuto / Contenido / Innehåll / Sisälllys / Indhold / Innhold / Treść / Índice / Obsah / Kazalo / İçerik / 目录 / 目次 / 목차



4 TOOLS

Werkzeuge / Gereedschappen / Outils / Strumenti / Herramientas / Verktøy / Työkalut / Værktøj / Verktøy / Narzędzia / Ferramentas / Nářadí / Orodja / Aletler / 工具 / ツール / 도구

5 INSTALLATION

Montage / Installatie / Installation / Installazione / Instalación / Montering / Asennus / Montering / Montering / Montaż / Instalação / Montáž / Namestitev / Montaj / 安装 / 取り付け / 설치





1 WARNINGS & INFO

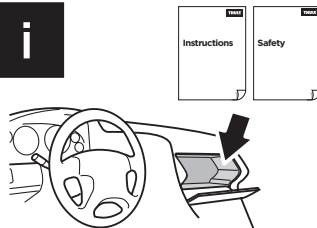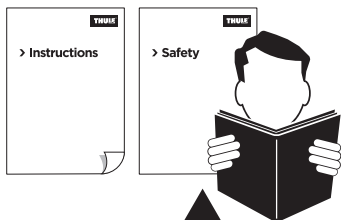

OK





NOT OK

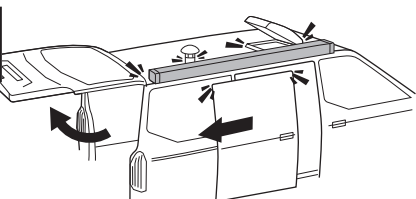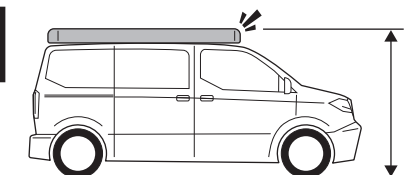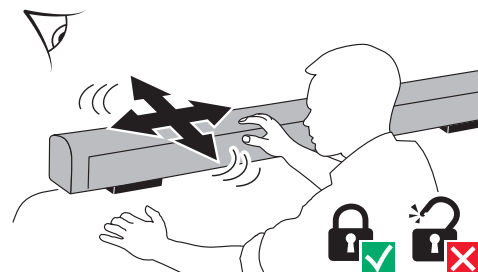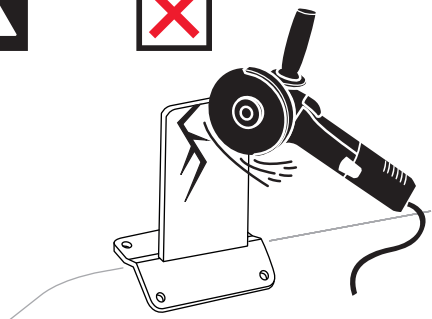

2 FITGUIDE

BRAND	MODEL	ADAPTER	AWNING
Ford	Transit Custom V710 L1 LHD	302952	T 3200 - 2.60 m
	Tourneo Custom V710 L1 LHD		
	Transit Custom V710 L1 RHD	302953	
	Tourneo Custom V710 L1 RHD		
	Transit Custom V710 L2 LHD	302952	T 3200 - 3.00 m
	Tourneo Custom V710 L2 LHD		
	Transit Custom V710 L2 RHD	302953	
	Tourneo Custom V710 L2 RHD		

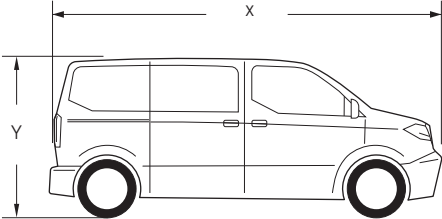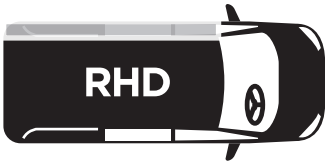

X		Y	
L1	505	H1	198
L2	545	H2	227

3 CONTENT



x8
M6 x 9 x 14,5
Blind rivet nut



x8
M6 x 20 mm
TX30 - A2




x8
M6
Schnorr - A2



x4



x2
M6 x 16 mm
A2



x2
M6 x 20 mm
A2



x1
M6 x 16 mm
TX30 - A2



x2



x5
M6
A2




x5
M6
A2



x5
M6
Nut Cap




x1




x1

LHD

x1

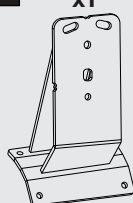


x1




RHD

x1




x1

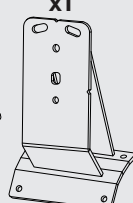

4 TOOLS



Ø 3 mm
Ø 9 mm

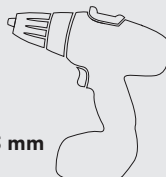

N° 10



TX30



i



ANTI-CORROSION



DEGREASER



SAND PAPER P120



GLUE SIKA 552 AT




SEALANT SIKA 522





ACTIVATOR SIKA 205

5 INSTALLATION


1

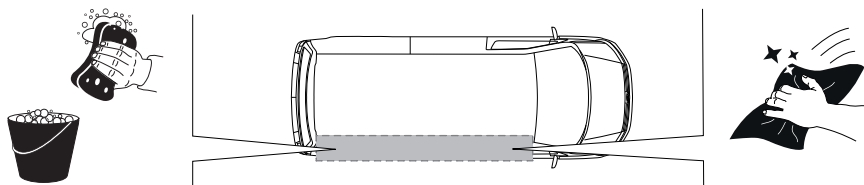


2

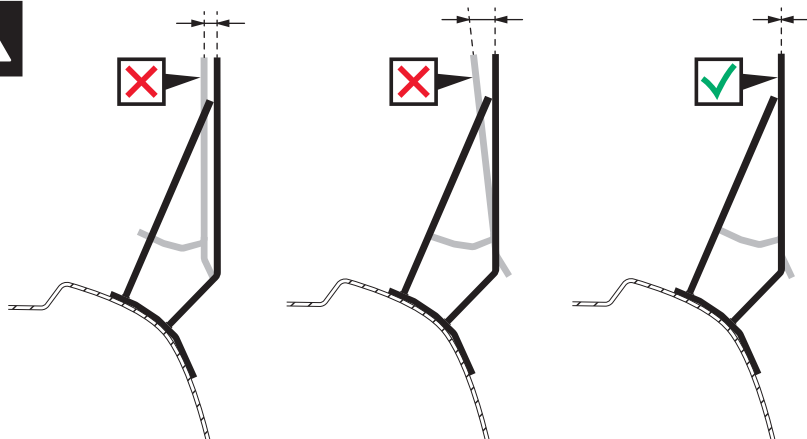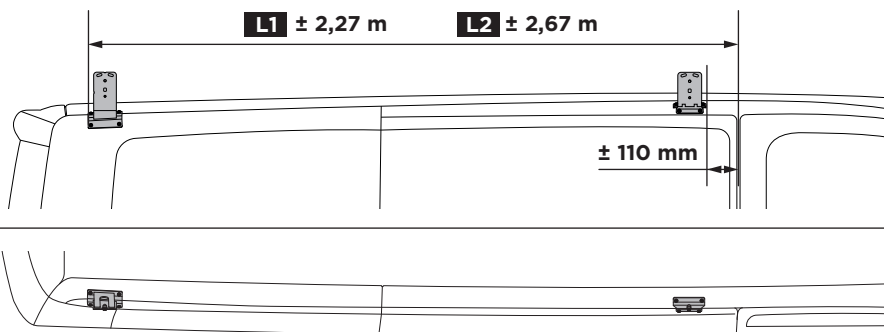


3




A

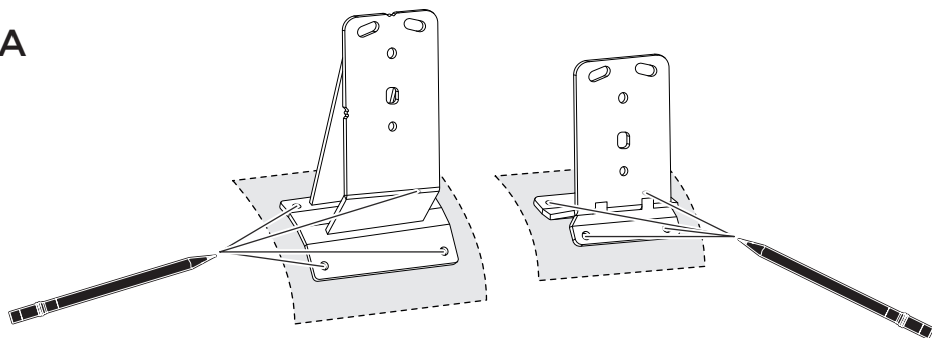


B

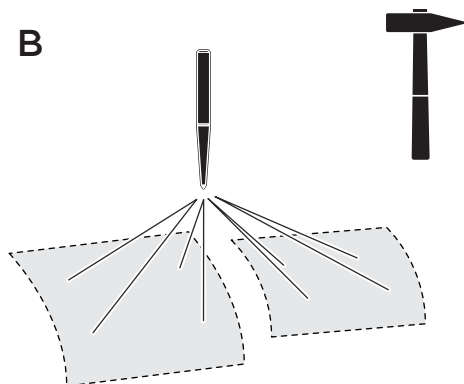


C

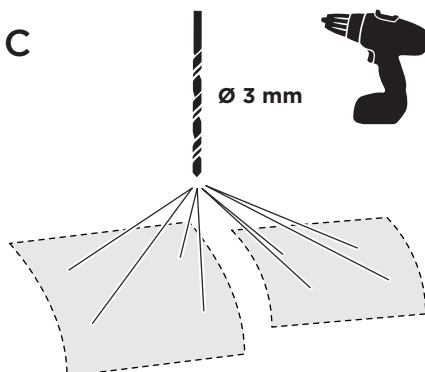

D

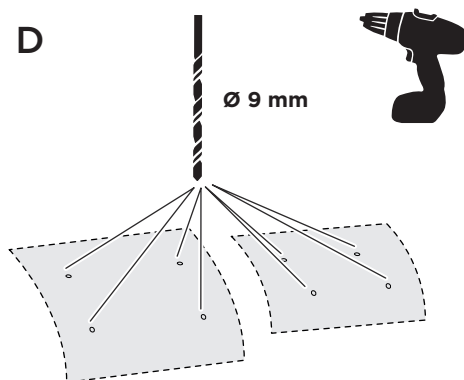


E

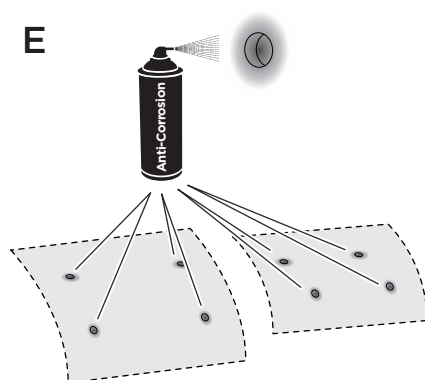


4





x8

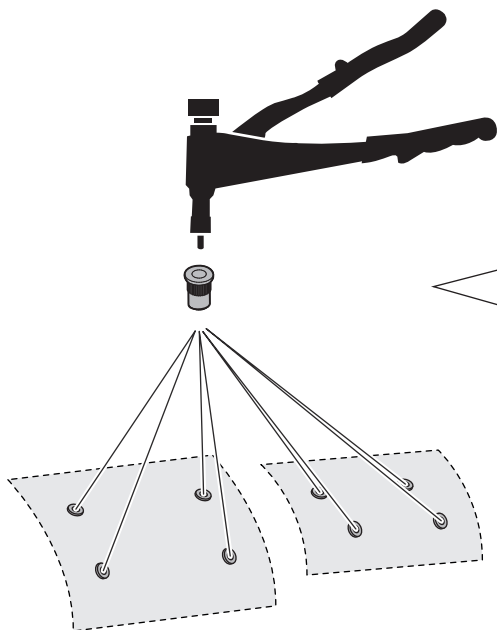


1

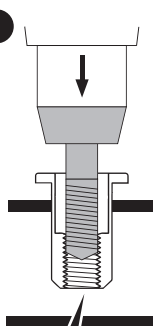

2

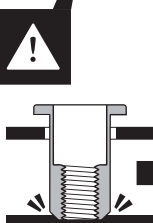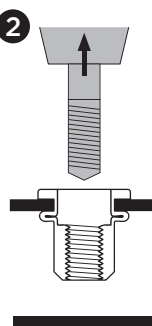



Ø 9 mm

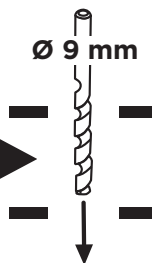


5




A

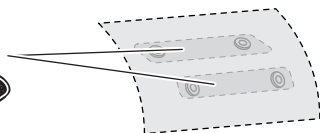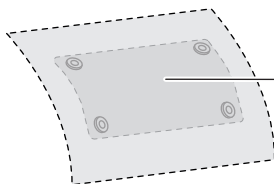


B

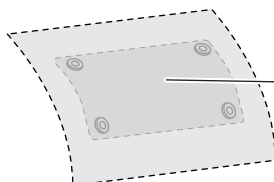


+

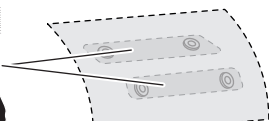

C

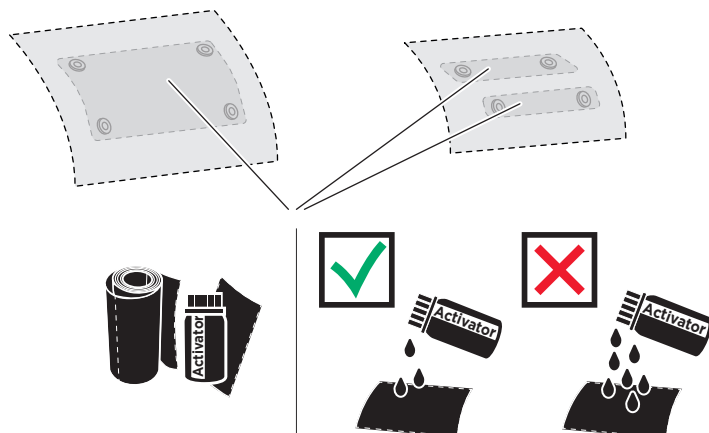




D

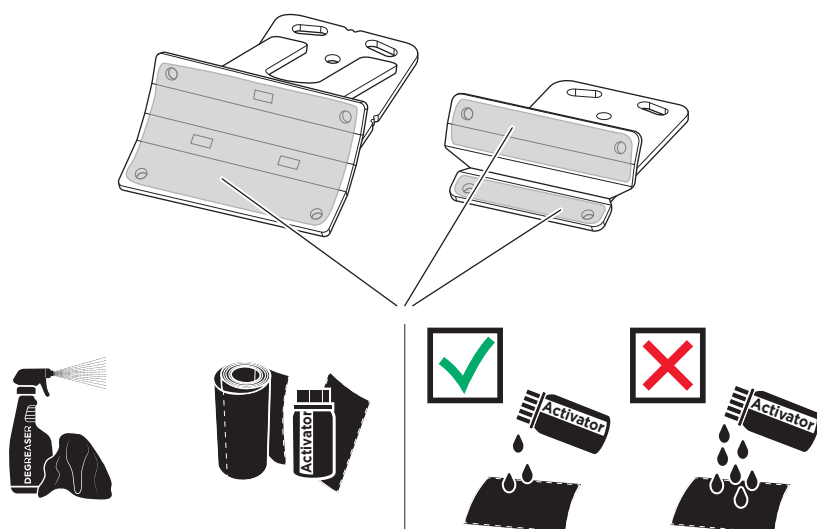



6





A

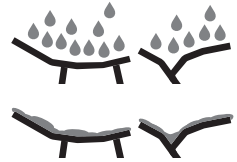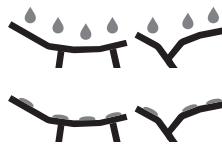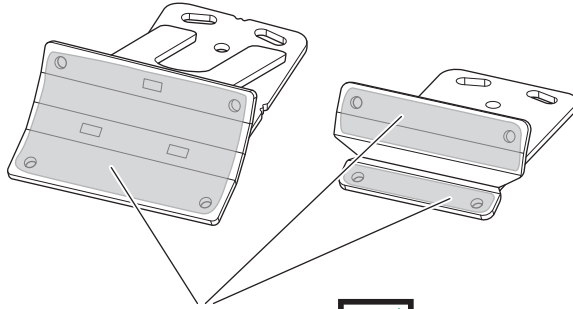


B

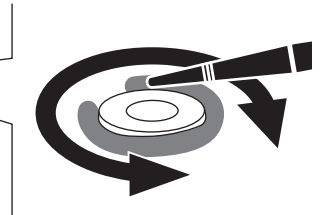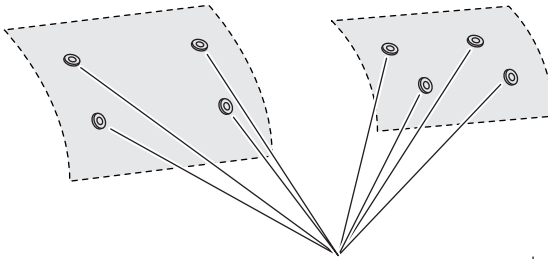


7

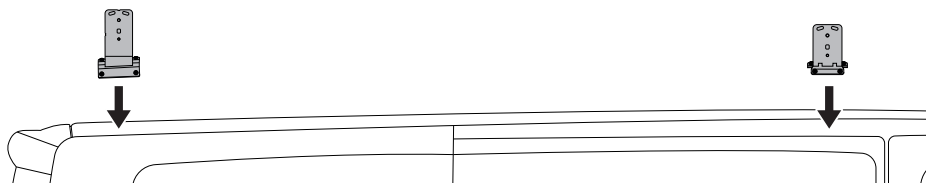


A

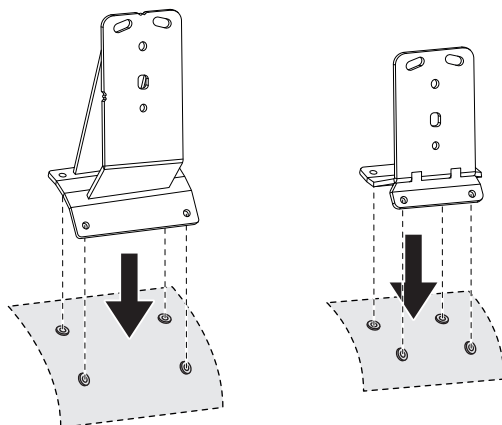



B

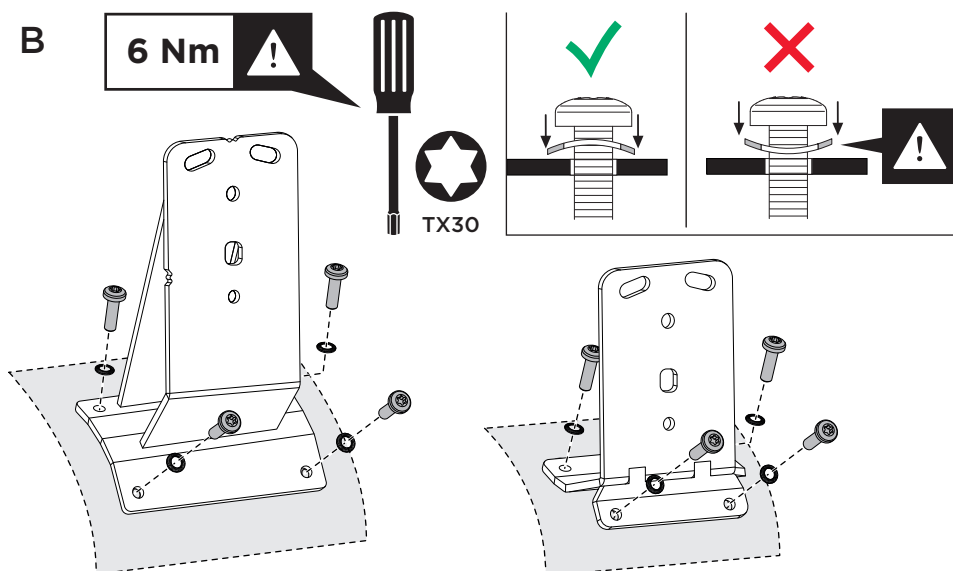

8

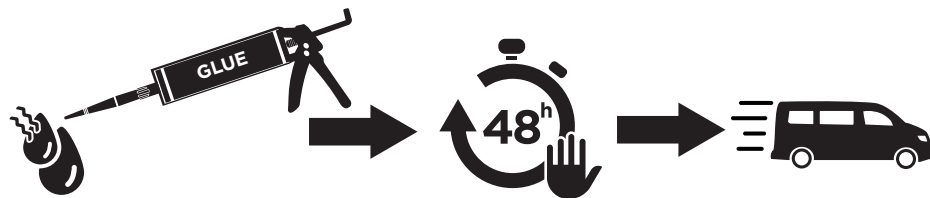

9

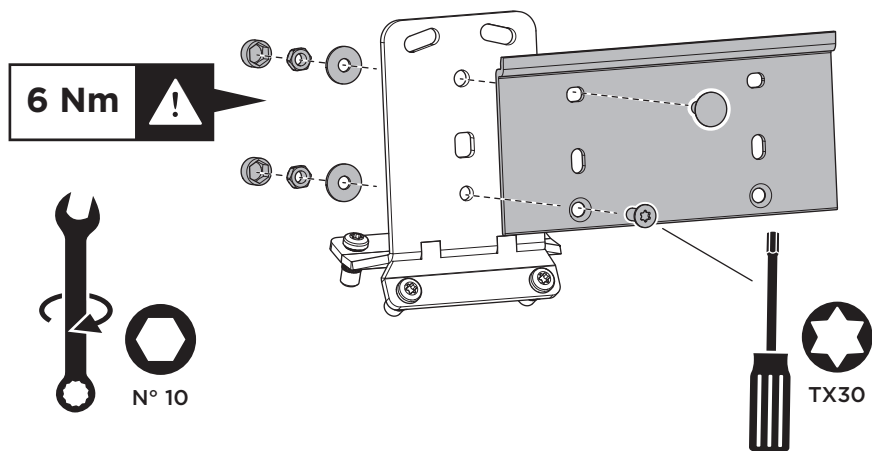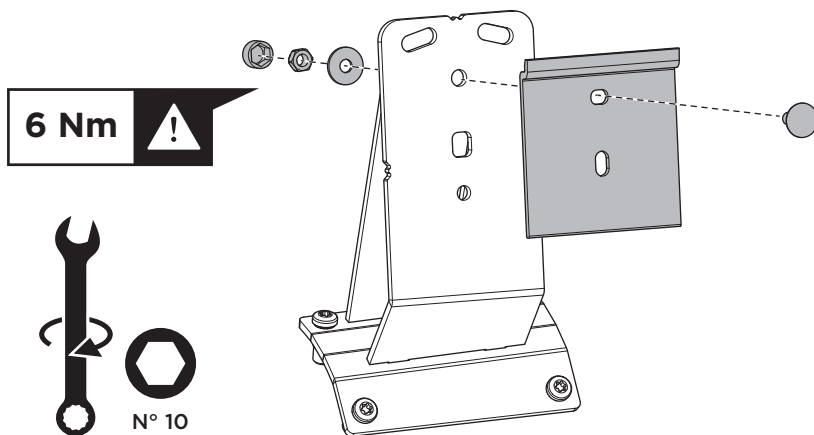


10



x2






x2



T 3200



x2

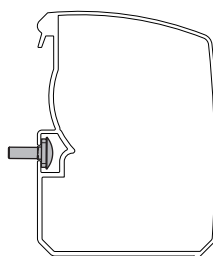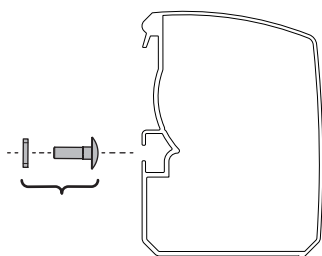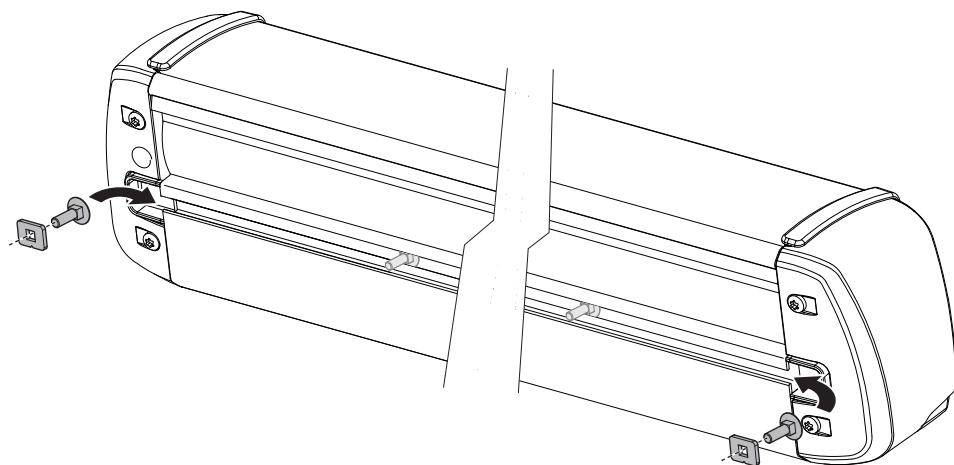

11

